

2009-2016 AUDI A4/A5/Q5 LOW VERSION INSTALL GUIDE

Note: Need to connect all wirings of android screen at first, then start car, or else it will show warning or error on dashboards.




1. Pry off the A/C wind panel.



2. Pry out the panel around original screen, remove the emergency light data cables.



3. Take A/C plug off.

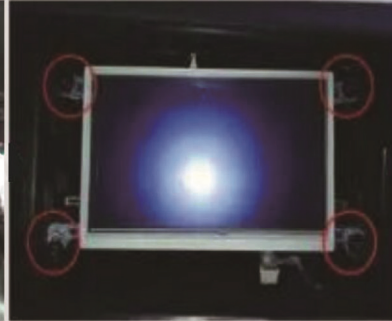

4. Remove four screws off original screen, take out data cable behind screen.



5. Remove the original A/C control panel off.



6. Remove the data cable off A/C control panel.



7. Dismantle A/C wind panel, take off data cable.




8. Take 4 fixing screws off car CD.



9. Connect power cable to A/C wire plug.



10. Connect the male plug of power cable to CD headunit.

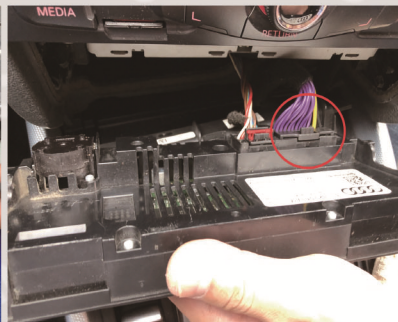

11. Connect A/C male plug to A/C control panel.



12. Fix metal bracket into original screen place with screws.




13. Take off original emergency light panel.




14. Dismantle the black frame off and put back silver panel.



15. Some car has an airbag indicator on the emergency light button, android screen has no such button, you can connect it, and leave it inside car.

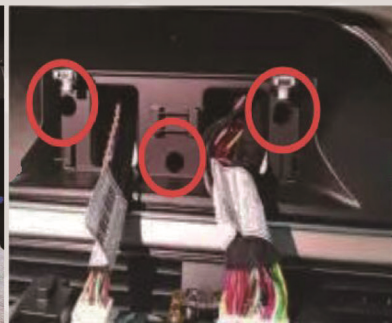

16. Put plastic mount and fix it, install android screen.

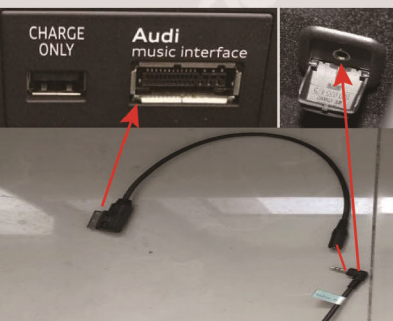

17. If Car has AMI port, connect AMI cable to it and "Audio out", if it has AUX input, just connect "Audio out" to AUX input.



18. A4/A5 After Installation



19. A4/A5 After Installation



20. Q5 After Installation